

Belspray: Bitumen Sprayers Spare Parts:

	<u>Item</u>	<u>Description</u>
All types	BS1A	Engine, Briggs & Stratton
	BS3	Pump
	BS4	Pump body
	BS5	Pump gasket
	BS6	Pump gland packing
	BS7	Pump drive key
	BS7A	Pump relief valve assembly
	BS8	Coupling, complete
	BS8A	Coupling, half pump
	BS8B	Coupling, half engine
	BS9	Coupling centre
	BS10	Coupling safety guard
	BS11	Filter complete
	BS17	Filter large O ring
	BS18	Filter small O ring
	BS22A	Filter element c/w end caps
	BS23	Hose, delivery, 5m c/w ends
	BS24	Hose, additional per metre
	BS25	Hose, delivery, 30m c/w ends
	BS26	Wheel c/w tyre & tube
	BS27	Wheelwasher
	BS28	Split pin
	BS30	Engine guard (with or without notice)
	BS31	Jubilee clip for hose assembly
	BS32	Jubilee clip for bitumen suction hose
	BS33	Handle for sprayer
	BS34	3 way valve
	BS35	Valve handle for BS34
	BS38	Rubber bushes for pump units
	BS39	Tool Kit

Bitumen	BS36	Overload valve: please state type
	BS37	Valve, 1/2" GEM
	BS44	Spray lance with handle; excluding jet
	BS46	Suction hose Heliflex; 1.8m with clips
	BS47	Hose tail for 1in hose
	BS48	Spray jet; 1/2" brass
	BS49	Suction pipe & strainer
	BS50	Copper pipe & unions
	BS51	Spray lance; 1m extension
	BS52	Spray lance with shut-off valve *

* Note: For use with sprayers fitted with overload valves NOT three-way valves

All goods sold subject to our standard conditions of sale