

Belspray: Bitumen Sprayers Spare Parts:

	<u>Item</u>	<u>Description</u>	
All types	BS1A	Engine, Briggs & Stratton	
	BS3	Pump	
	BS4	Pump body	
	BS5	Pump gasket	
	BS6	Pump gland packing	
	BS7	Pump drive key	
	BS7A	Pump relief valve assembly	
	BS8	Coupling, complete	
	BS8A	Coupling, half pump	
	BS8B	Coupling, half engine	
	BS9	Coupling centre	
	BS10	Coupling safety guard	
	BS11	Filter complete	
	BS17	Filter large O ring	
	BS18	Filter small O ring	
	BS22A	Filter element c/w end caps	
	BS23	Hose, delivery, 5m c/w ends	
	BS24	Hose, additional per metre	
	BS25	Hose, delivery, 30m c/w ends	
	BS26	Wheel c/w tyre & tube	
	BS27	Wheelwasher	
	BS28	Split pin	
	BS30	Engine guard (with or without notice)	
	BS31	Jubilee clip for hose assembly	
	BS32	Jubilee clip for bitumen suction hose	
	BS33	Handle for sprayer	
	BS34	3 way valve	
	BS35	Valve handle for BS34	
	BS38	Rubber bushes for pump units	
	BS39	Tool Kit	
	Bitumen	BS36	Overload valve: please state type
		BS37	Valve, 1/2" GEM
		BS44	Spray lance with handle; excluding jet
		BS46	Suction hose Heliflex; 1.8m with clips
		BS47	Hose tail for 1in hose
		BS48	Spray jet; 1/2" brass
		BS49	Suction pipe & strainer
		BS50	Copper pipe & unions
		BS51	Spray lance; 1m extension
BS52		Spray lance with shut-off valve *	

* Note: For use with sprayers fitted with overload valves NOT three-way valves

All goods sold subject to our standard conditions of sale