


Hand operated BELSPRAY sprayer for cold bitumen emulsion—Type BSBH25 and BSBH

CLEANING AND MAINTENANCE

Exploded view of double diaphragm pump

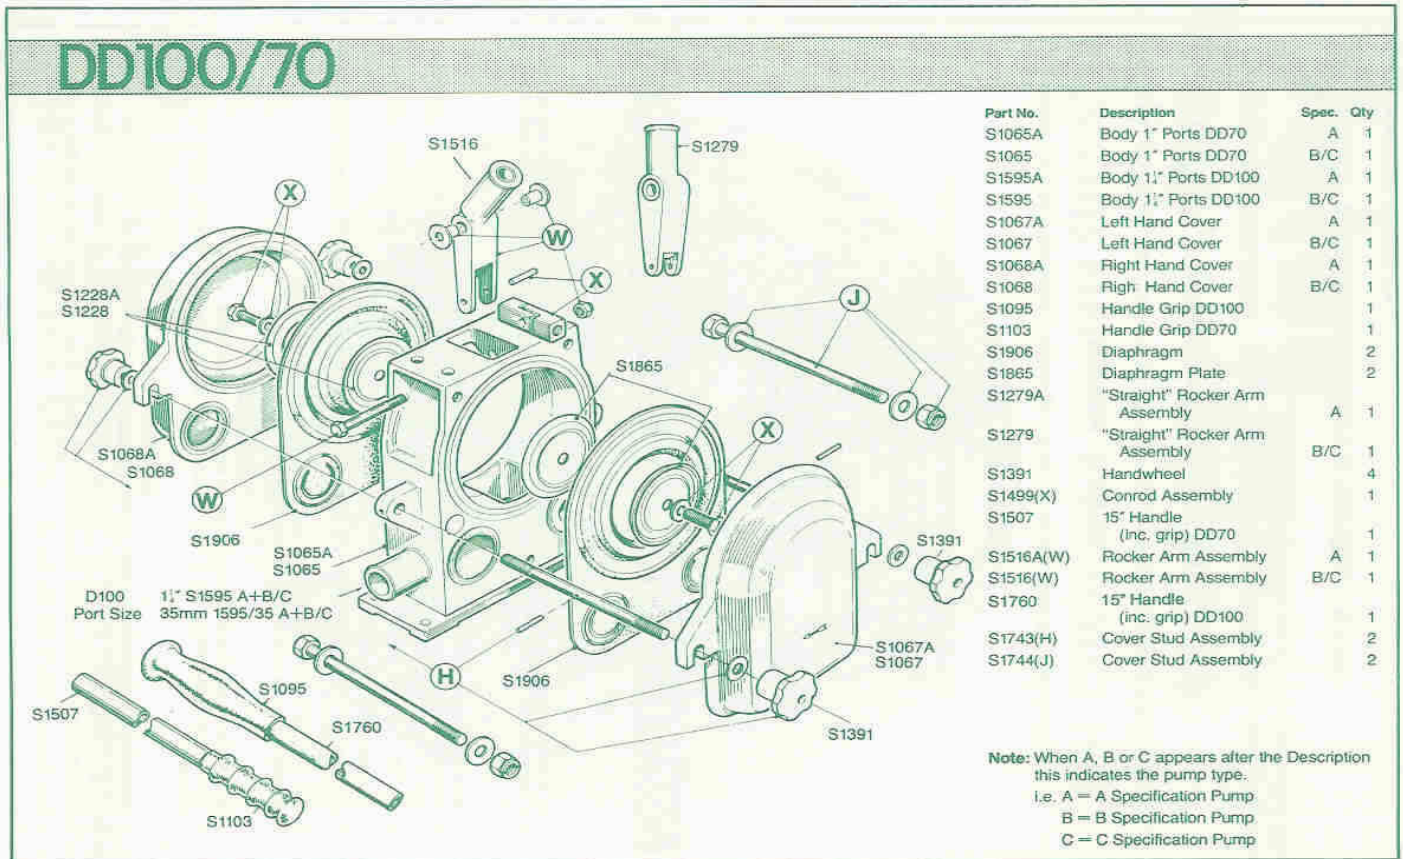

AIR RECEIVER

To clean the air receiver, undo the cap. Clean all the parts in solvent and check that all parts are correctly re-assembled. It is important that there should be no air leaks around the rim of the cap or at the joints of the inlet pipe.

CHECK THE FOLLOWING IF SPRAYER DOES NOT PUMP

Pump: Check that rubber diaphragms are seated correctly. Check that neither of the rubber diaphragms are damaged.

Air Receiver: Check that the cap is fitted correctly.

Others:

Suction hose loose on suction pipe: Check jubilee clips are tight. Increase suction tube diameter by winding electrical tape around the tube. Refit suction hose.

Hose damaged: Check that there are no holes in the delivery hose.